


MSB Room 101 633 E. Broadway at Glendale Avenue

(818) 548-3200

EQUIPMENT VIEW OBSCURING SCREEN DETAIL

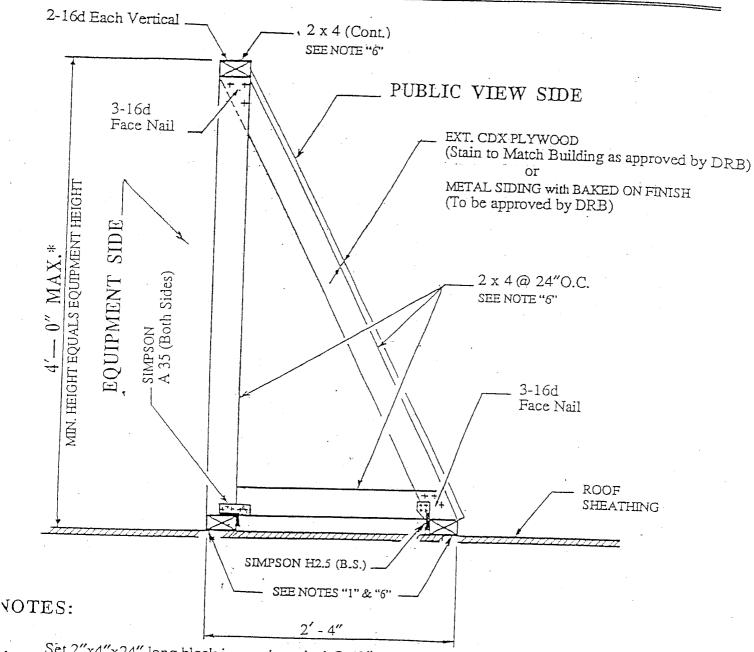

Set 2"x4"x24" long block in mastic typical @ 48" O.C. Attach each block to purlins or subpurlins with 2-3/8" Dia. x 5" lag bolts. Seal head of lag bolt with mastic. Weatherproofing of existing roofing is to be maintained.

All nails, screws, bolts and Simpson or equal clips to be galvanized metal.

Provide access gate to equipment.

Building permit is required for above work.

All work shown herein is pre-approved and must be adhered to. Any variations will require plans and calcs by Engineer or Architect.

All 2"x4" shall be pressure treated with an approved persevative or shall be California Redwood.